



Door frames need to match the thickness of the wall. These diagrams may help you better understand what to measure. Brick or Stucco installations are slightly different. Sometimes an additional sub-casing is needed for brick installations.

Some common door jamb widths:

For 2x4 walls with brick or stucco - 4-9/16"

For 2x4 walls with Hardy Plank siding - 5-1/4"

For 2x6 walls with brick or stucco - 6-9/16"

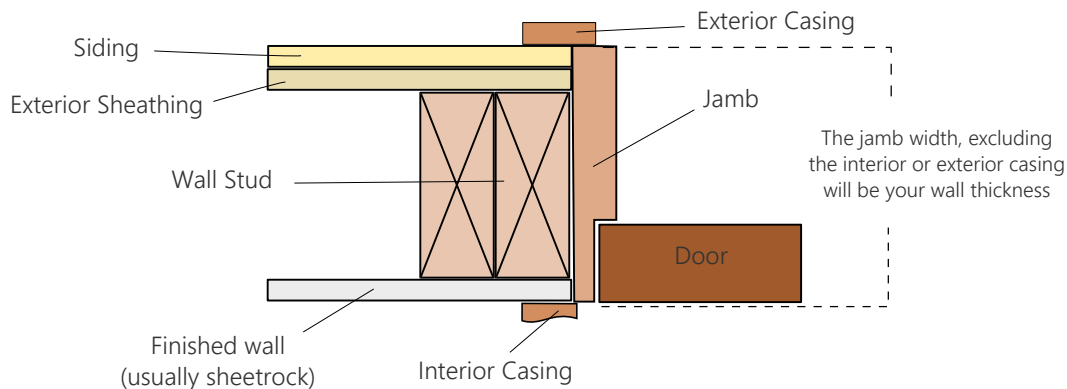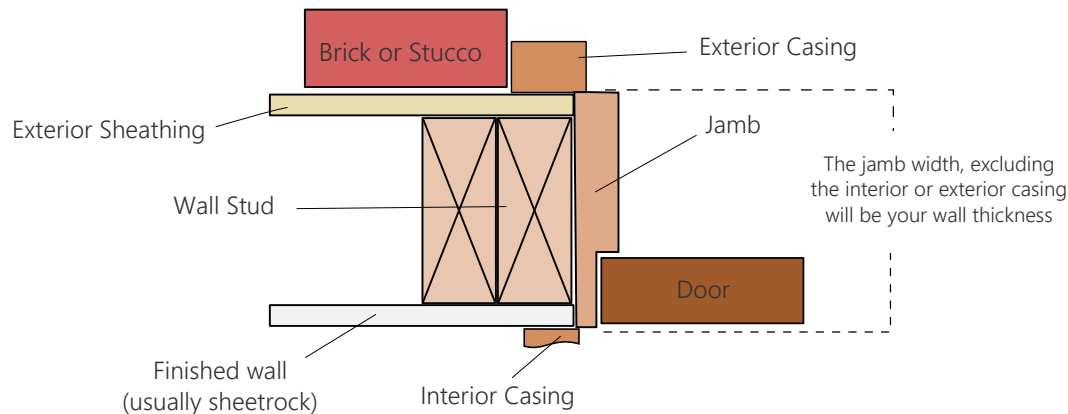

If you need some help, don't worry. Just speak with one of our trained professionals at your local Tri-Supply showroom. We've been building doors for over 50 years and are ready to help you with yours.

Visit one of our locations today or contact us through our website. We're ready when you are.